

CERTIFICATION

This torque wrench as calibrated at the factory, is certified to meet the current ASME specification. Additionally, all wrenches are calibrated on a torque standard traceable to the National Institute of Standards and Technology (N.I.S.T.).

CONVERSION TABLE

To Convert From	To	Multiply By
in. oz.	in. lb.	0.06250
in. lb.	in. oz.	16
in. lb.	ft. lb.	0.083333
in. lb.	cmkg	1.15212
in. lb.	mkg	0.01152
in. lb.	Nm	0.11298
in. lb.	dNm	1.12984
ft. lb.	in. lb.	12
ft. lb.	mkg	0.13825
ft. lb.	Nm	1.35581
dNm	in. lb.	0.88507
dNm	Nm	0.1
Nm	dNm	10
Nm	cmkg	10.1971
Nm	mkg	0.10197
Nm	in. lb.	8.85074
Nm	ft. lb.	0.73756
cmkg	in. lb.	0.86796
cmkg	Nm	0.09806
mkg	in. lb.	86.7961
mkg	ft. lb.	7.23301
mkg	Nm	9.80665

FOR YOUR PERMANENT FILE

WRENCH MODEL NUMBER:

WRENCH SERIAL NUMBER:

For Warranty Claims, Contact CDI Torque Products at (626) 965-0668.

LIMITED WARRANTY

The CDI Metal Handle Dual Scale Micrometer Adjustable Torque Wrench is backed by a one year warranty. This warranty covers manufacturer defects and workmanship. The warranty excludes misuse, abuse and normal wear and tear. Exclusion is not allowed in some states and may not apply. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.



Please Recycle

IMPORTANT ENVIRONMENTAL NOTES:

1. This equipment may contain hazardous materials which can be harmful to the environment.
2. Do not dispose of this equipment as municipal waste. Return it to the distributor or a designated collection center. Thank you for caring about our environment!

CDI TORQUE PRODUCTS

A Snap-on Specialty Tools Brand

19220 SAN JOSE AVENUE • CITY OF INDUSTRY, CA 91748 • USA
(626) 965-0668

Find other fine torque products at WWW.CDITORQUE.COM

OPERATION MANUAL

METAL HANDLE DUAL SCALE MICROMETER ADJUSTABLE TORQUE WRENCH



CDI TORQUE PRODUCTS

SAFETY MESSAGES



WARNING

Read operation manual completely before using torque instrument and store for future reference.



Wear safety goggles-both user and bystanders



- An out of calibration torque wrench can cause part or tool breakage
- Periodic re-calibration is necessary to maintain accuracy
- Do not exceed rated torque as overtorquing can cause wrench or part failure
- Do not use torque instrument to break fasteners loose



- Do not use cheater extension on the handle to apply torque
- Broken or slipping tools can cause injury.




CAUTION - RATCHET HEAD

Ratchet mechanism may slip or break if dirty, mismatched or worn parts are used, or direction lever is not fully engaged. Ratchets that slip or break can cause injury.

MAINTENANCE / SERVICE

1. The torque wrench's internal mechanism is permanently lubricated during assembly. **Do not attempt to lubricate the internal mechanism.**
2. Clean torque wrench by wiping. **Do not immerse.**
3. Store torque wrench in protective tube at its lowest torque setting. **Do not force handle below lowest setting.**

ADJUSTMENTS OF TORQUE SETTINGS

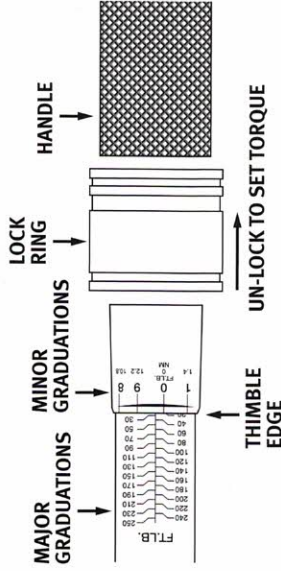

A. To unlock handle hold tube and pull lock ring back allowing handle to turn CW or CCW.

B. Set wrench to desired torque as follows:
EXAMPLE - 64ft. lbs.

1. Keep slight rearward pull on lock-ring during all adjustments.
2. Line up thimble edge with the "60" graduation cross line and zero with vertical line. Wrench is now set at 60 ft. lbs. (See Figure I)
3. Turn handle and set thimble graduation to "4" on vertical line. Wrench is now set at 64 ft. lbs. (See Figure II)

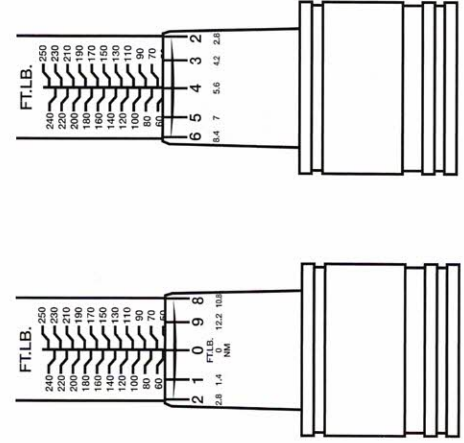


Figure I


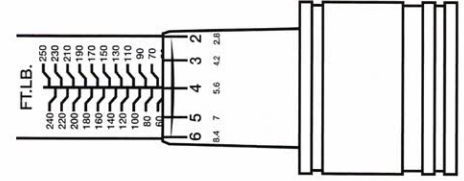


Figure II

4. Lock handle by releasing back pressure on lock-ring until it clicks and handle doesn't turn.

5. To torque fastener, keep hand centered on the grip handle. Apply a slow steady force in the desired direction until a click/impulse is heard or felt. Stop pulling and allow the wrench to reset.

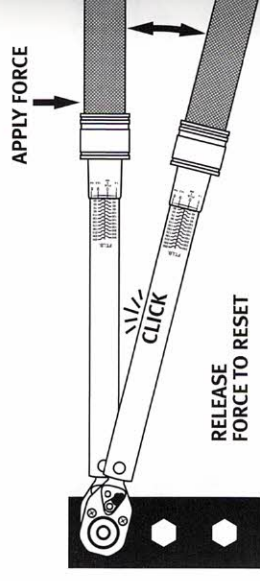


USE OF EXTENSIONS AND ADAPTERS

When using an extension or adapter (increasing the effective length of the torque wrench) the output torque value will change. To calculate the new torque output of the wrench use the following formula:

$$TW = \frac{TA \times L}{L + A}$$

TA = Torque exerted @ end of adapter
L = Distance between square drive and hand position
TW = Wrench scale reading
A = Length of adapter or extension

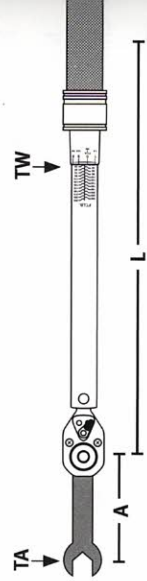

A number of variables can affect torque accuracy. These include the length of an adapter or extension, length of the wrench and variations in hand position on the wrench will affect the accuracy of the above

